

**DANCOVER<sup>®</sup>**



Manual  
for  
Ceiling Patio Heater



**Please read these instructions carefully before using your new halogen heater.**

Thank you for choosing our Indoor/Outdoor Patio Heater. This owner's manual will provide you with valuable information necessary for the proper care and maintenance of your new product.

Please take a few moments to thoroughly read the instructions and familiarize yourself with all the operational aspects of your new heater.

# IMPORTANT INSTRUCTIONS

## Warning:

- ◇ DO NOT use the heater with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.
- ◇ It's dangerous to install the appliance close to curtains and other combustible materials.
- ◇ DO NOT use the heater in reach of a shower, bath or a swimming pool.
- ◇ Heater is not located immediately below a socket-outlet.
- ◇ If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
- ◇ In order to avoid overheating, DO NOT cover the heater.
- ◇ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- ◇ Keep the appliance and its cord out of reach of children less than 8 years.
- ◇ **WARNING:** This heater is not equipped with a device to control the room temperature. DO NOT use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- ◇ Pay attention that, no combustible material due to Wind or other environmental influences covers or obstructs the appliance, such as curtains, marquees, flags, plastic foil etc.
- ◇ **CAUTION** — Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

When using this electric unit, basic safety precautions should be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read ALL instructions before using this unit.
2. **CAUTION: Risk of Electric Shock. DO NOT** open or try to repair the heater yourself.
3. This heater may get hot when in use. To avoid burns, **DO NOT** let bare skin touch hot surfaces. If provided, use handles when moving this heater.
4. Keep combustible materials, such as furniture, pillows, bedding, paper, clothes, and curtains at least 3 ft from the front of the heater and keep them away from the sides, top, and rear. **DO NOT** place towels or other objects on the heater.
5. Extreme caution is necessary when any heater is used by or near children or the disabled, or when the heater is left operating and unattended.
6. **DO NOT** operate any heater with a damaged cord or after the heater malfunctions, has been drooped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
7. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. **NEVER** locate heater where it may fall into a bathtub or other water container. To protect against electrical hazards, **DO NOT** immerse in water or other liquids.
8. **DO NOT** touch the control panel with a wet hand.
9. **DO NOT** run cord under carpeting. **DO NOT** cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
10. **DO NOT** insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
11. To prevent a possible fire, **DO NOT** block the air intakes or exhaust in any manner. **DO NOT** use on soft surfaces, like a bed, where openings may become blocked.

12. A heater has hot and arcing or sparking parts inside. DO NOT use in areas where gasoline, paint, explosive and/or flammable liquids are used or stored. Keep unit away from heated surfaces and open flames.
13. Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire. However, if you have to use an extension cord, the cord shall be 1.5m<sup>2</sup> minimum size.
14. To disconnect heater, turn controls to OFF.
15. Always turn OFF the unit before moving or cleaning, or whenever the heater is not in use.
16. Use only for intended household use as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons. The use of attachments not recommended or sold by unauthorized dealers may cause hazards.
17. Always use on a dry, level surface. Use on ceiling only.
18. WARNING: To reduce the risk of fire or electric shock, DO NOT use this unit with any solid-state speed control device.
19. DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user serviceable parts. Qualified personnel should perform all servicing only.
20. Connect to properly grounded outlets only.
21. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
22. Children should be supervised to ensure that they DO NOT play with the appliance.
23. The marketing concerning covering shall be visible after the heater has been installed.
24. Save these instructions.

# SPECIFICATIONS

Voltage Rating	220-240V (50Hz)
Power Consumption	1500W
Unit Size	425(W)*425(D)*300(H)
Unit Weight	1.96Kg

# PRODUCT DIAGRAM



# OPERATING INSTRUCTIONS

- A. Place the heater on a firm, level ceiling surface;
- B. The Hook on the ceiling hanging the Patio Heater must be able to undertake a weight 3 or 4 times that of the Patio Heater itself.
- C. Place the Hook around the Ceiling Hook and clip on any Ring of the Chain to adjust the height of the Patio Heater to the Floor.
- D. The distance between the bottom of the Patio Heater to the Floor must be over 1.8m, and the distance between heater and ceiling must be at least 30cm.
- E. These appliances must be supplied with proper voltage and frequency (AC220-240V, 50Hz), and connected to an individual, properly grounded branch circuit, protected by a circuit breaker, which is in accordance with wiring rules. Power cord of this appliance must be fastened with the chain, installation can only be carried out by qualified person in order to avoid a hazard.
- F. Only operate the heater when it is in the upright position. Our Electric Patio Heater is equipped with One heat settings. The switch on the heater head is used to control the One heat setting. For 1500W, the 0 position is off. To operate the heater on high, push the Switch Cord again. This will cause both the bottom and top heating elements to glow and radiate heat.

## MAINTENANCE

Turn OFF the circuit breaker before maintenance and let the unit cool completely.

- ◇ To keep the heater clean, the outer shell may be cleaned with a soft, damp cloth. You may use a mild detergent if necessary. After cleaning, dry the with a soft cloth.
- ◇ DO NOT use alcohol, gasoline, abrasive powders, furniture polish, or rough brushes to clean the heater. This may cause damage or deterioration to the surface of the heater.
- ◇ Although this heater is outdoor approved (Balconies and patios), DO NOT immerse the heater in water for your safety. Wait until the unit is completely dry before use.

# STORAGE


If the heater will not be used for a long period of time, store it in a cool, dry location when not in use. To prevent dust and dirt build-up, use the original packaging to repack the unit.

# TROUBLE SHOOTING

If the heater will not operate, please check the following before seeking repair of service:

- ◇ Check if electricity to the main fuse is working.
- ◇ Make certain the power switches are turned ON. If not, choose a setting.

# DISPOSAL

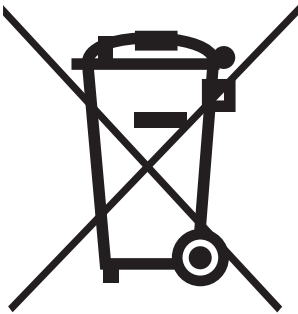

## **Environmental Protection**

Waste electrical production should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



## Contact information

### Head office:

Dancover A/S  
Nordre Strandvej 119 G  
3150 Hellebæk  
Denmark

For more information  
please visit:  
[www.dancovershop.com](http://www.dancovershop.com)

## National contact

Denmark: 70 26 76 20  
[denmark@dancover.com](mailto:denmark@dancover.com)

UK: 020 8099 7570  
[uk@dancover.com](mailto:uk@dancover.com)

Germany: 041 0266 7040  
[germany@dancover.com](mailto:germany@dancover.com)

France: 0975 181 800  
[france@dancover.com](mailto:france@dancover.com)

Sweden: 040 233 262  
[sverige@dancover.com](mailto:sverige@dancover.com)

Finland: 0 931 581 720  
[suomi@dancover.com](mailto:suomi@dancover.com)

Poland: 22 300 8602  
[polska@dancover.com](mailto:polska@dancover.com)

Luxembourg: +49 041 0266 7040  
[luxembourg@dancover.com](mailto:luxembourg@dancover.com)

Portugal: 308 800 899  
[portugal@dancover.com](mailto:portugal@dancover.com)

Spain: 911 436 828  
[espana@dancover.com](mailto:espana@dancover.com)

Italy: 02 479 21 198  
[italia@dancover.com](mailto:italia@dancover.com)

Switzerland: 0840 000125  
[schweiz@dancover.com](mailto:schweiz@dancover.com)

Austria: 0662 626935  
[austria@dancover.com](mailto:austria@dancover.com)

Norway: 231 00 690  
[norge@dancover.com](mailto:norge@dancover.com)

Nederland: 0 858 880 524  
[nederland@dancover.com](mailto:nederland@dancover.com)

Ireland: 0 151 33 003  
[ireland@dancover.com](mailto:ireland@dancover.com)

Belgium: 0 28 08 08 09  
[belgique@dancover.com](mailto:belgique@dancover.com)