


DANCOVER[®]





.com

Manual
for
Fitting Set Wall
for
Pergola San Pablo
3x5,8m and 4x5,8m

Manual Instruction
Fitting Set Wall for
Pergola Gazebo San Pablo
3x5,8m and 4x5,8m

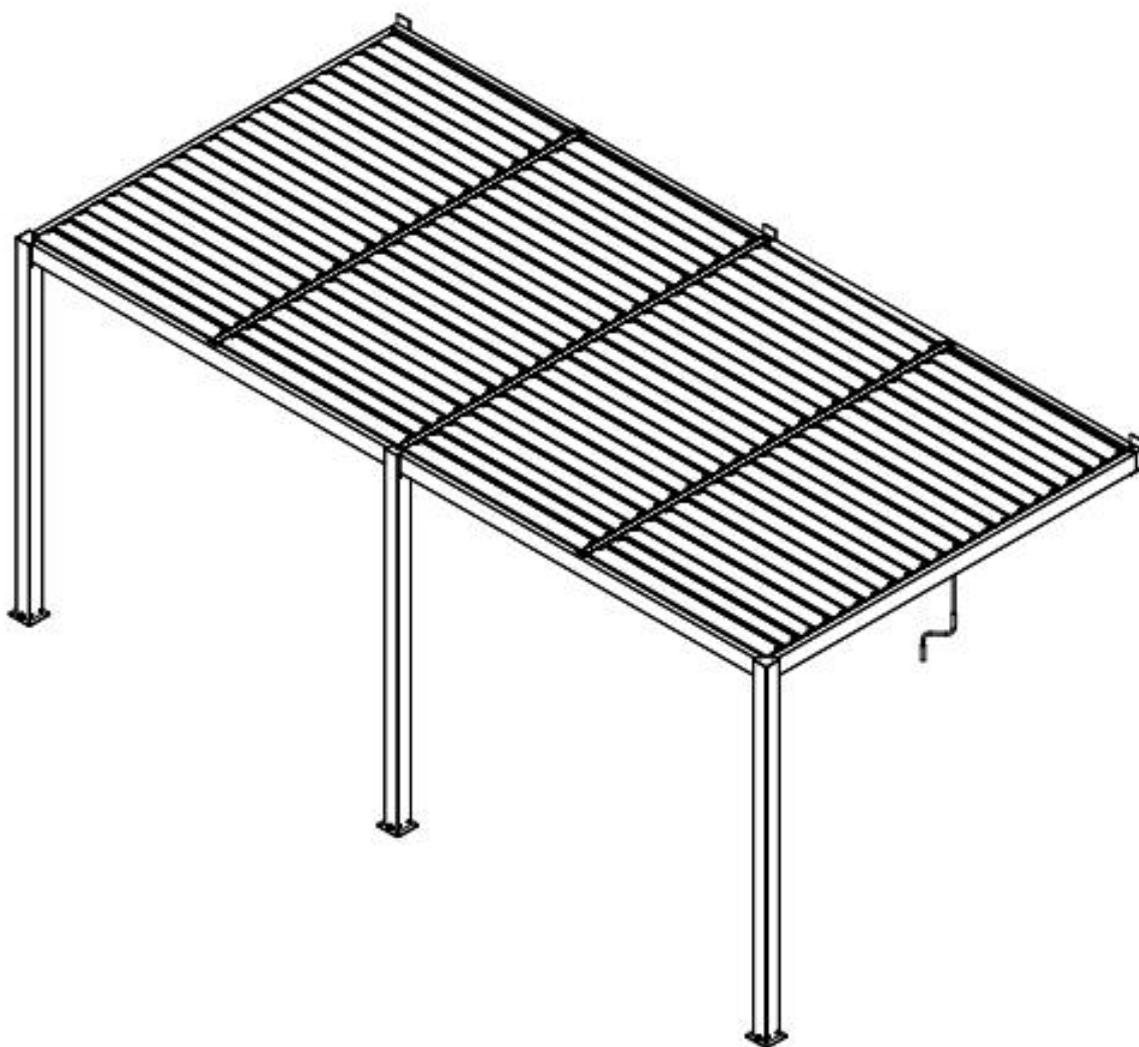


Spare parts list

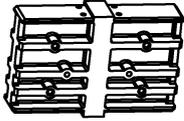
Label No.	Part description	Drawing	Qty
S	Corner connector		2
T	Middle connector		1
U	Wall bracket		3
K7	Hex Socket Flat Head Screw with the gasket M8x40	 M8X40	3
K8	Gasket	 $\Phi 8$	3
K9	Hex Head Wood Screw + Ribbed Plastic Anchor	 M10x80 $\Phi 14 \times 70$	9
K10	Gasket	 $\Phi 10$	9
K11	M10 screw cover		9



1. Drill holes for the wall brackets and install these brackets U.

Step 1: Use a hand electric drill to drill hole No.1, install the wall bracket U with wood screw and ribbed plastic anchor, adjust the height and lever of the wall bracket, then tighten the wood screw; Then drill holes No.2 and No.3, install plastic anchors and tighten the wood screws.

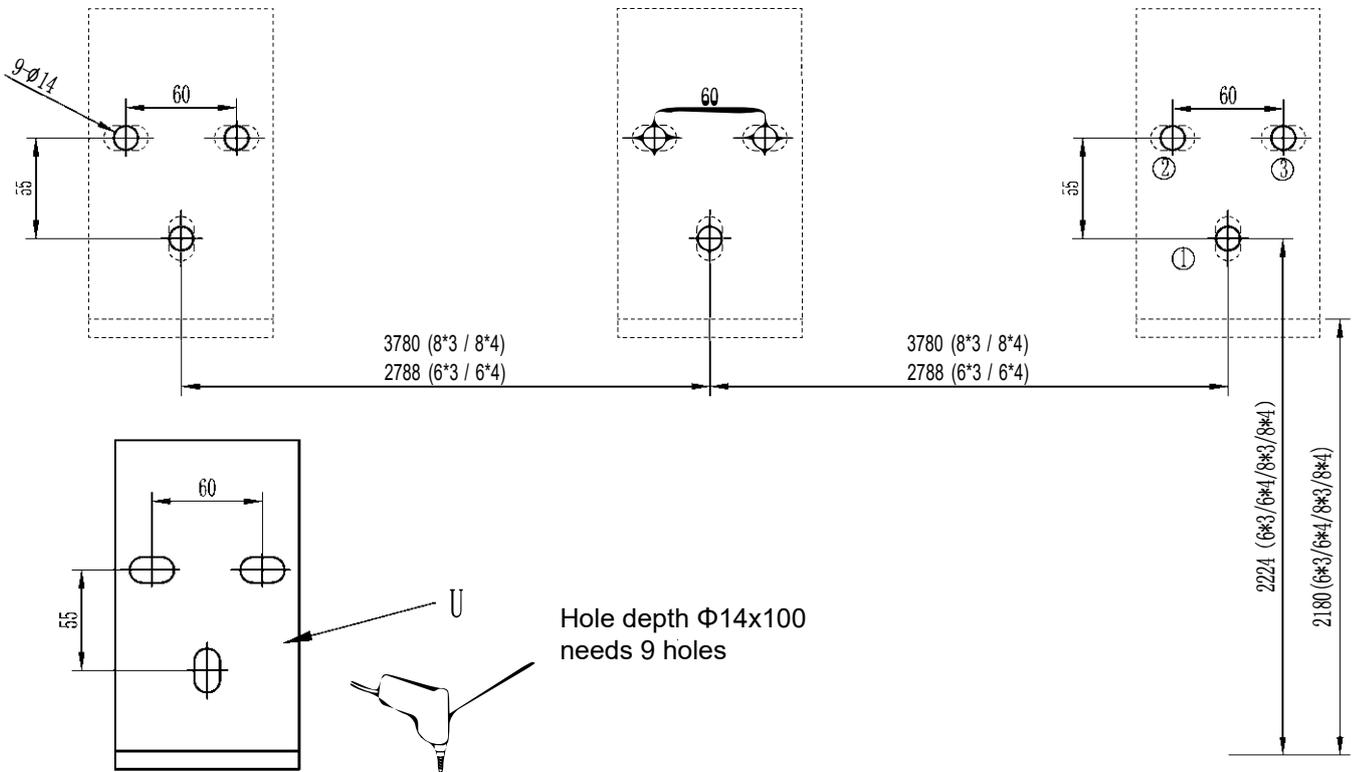


Step 2: Install another two wall brackets U same way, then put on M10 screw and covers K11.

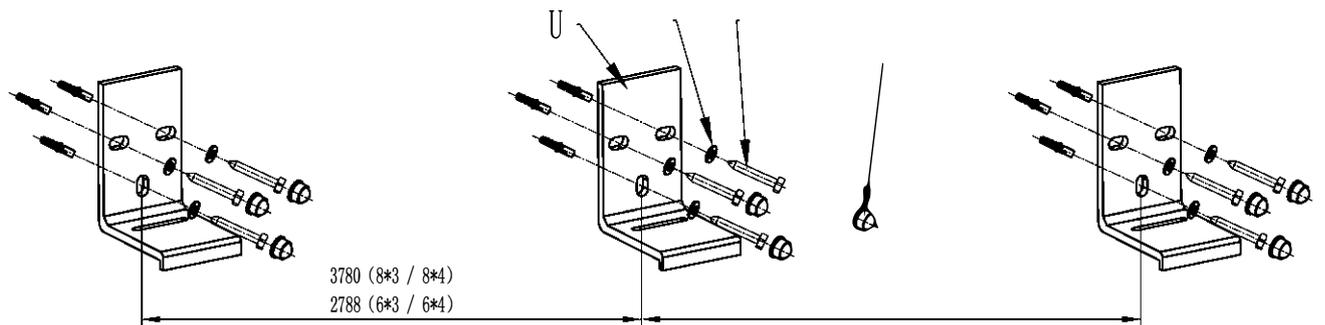

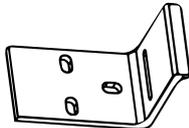
U		QTY:3PCS	K9		M10x80 Φ14x70	QTY:9SETS
K10	 Φ10	QTY:9PCS	K11	 M10	QTY:9PCS	Page 1

2. Install front and rear beam C1/C2 with corner connector S.

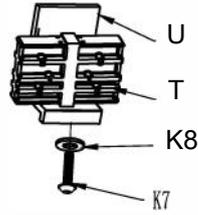



Step 1. Attach the middle connector T to the middle wall base U with screw K7 and spacer K8, taking care not to tighten screw K7.

Step 1

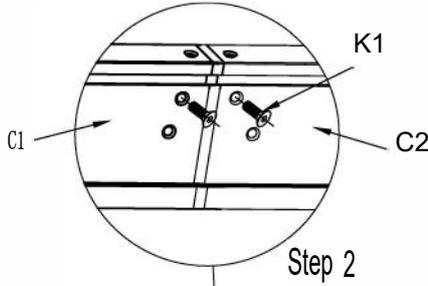

Step 2. Insert front and rear beams C1/C2 into middle connector T respectively and connect them with screw K1, then tighten K1.

Step 2

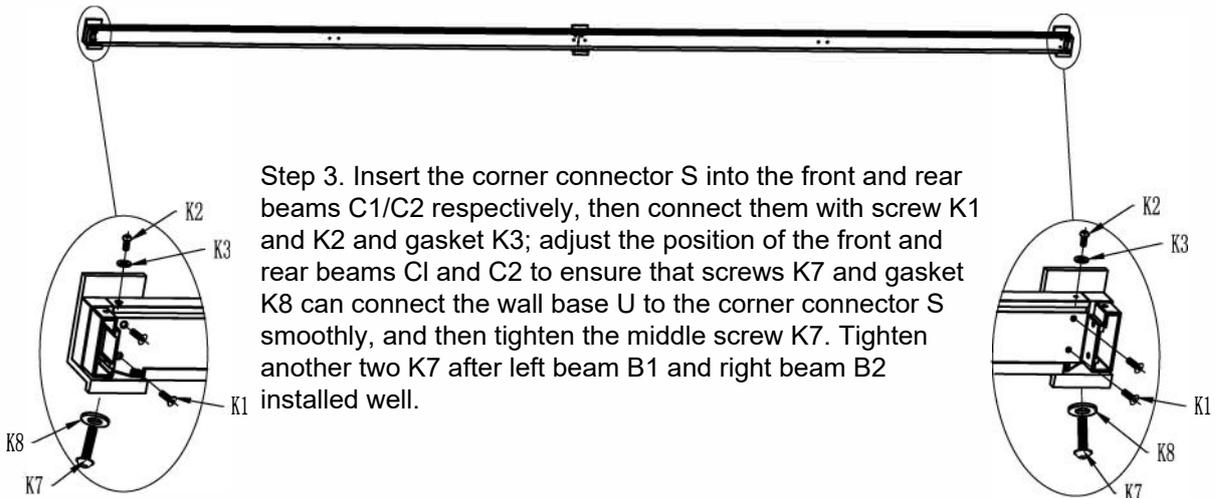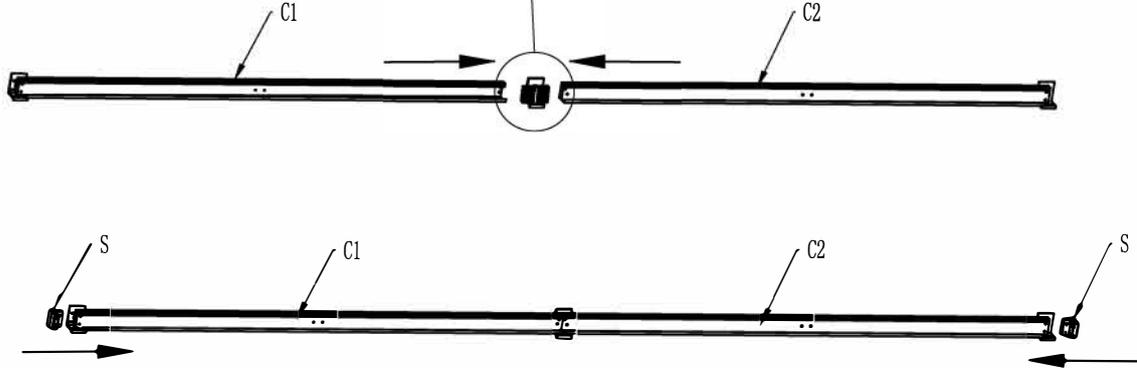

Step 3. Insert the corner connector S into the front and rear beams C1/C2 respectively, then connect them with screw K1 and K2 and gasket K3; adjust the position of the front and rear beams C1 and C2 to ensure that screws K7 and gasket K8 can connect the wall base U to the corner connector S smoothly, and then tighten the middle screw K7. Tighten another two K7 after left beam B1 and right beam B2 installed well.

S



QTY:2PCS

T



QTY:1PC

K7



QTY:3PCS

M8X40


K8



QTY:3PCS

Ø8

3. Following and next steps please refer to original pergola manual.

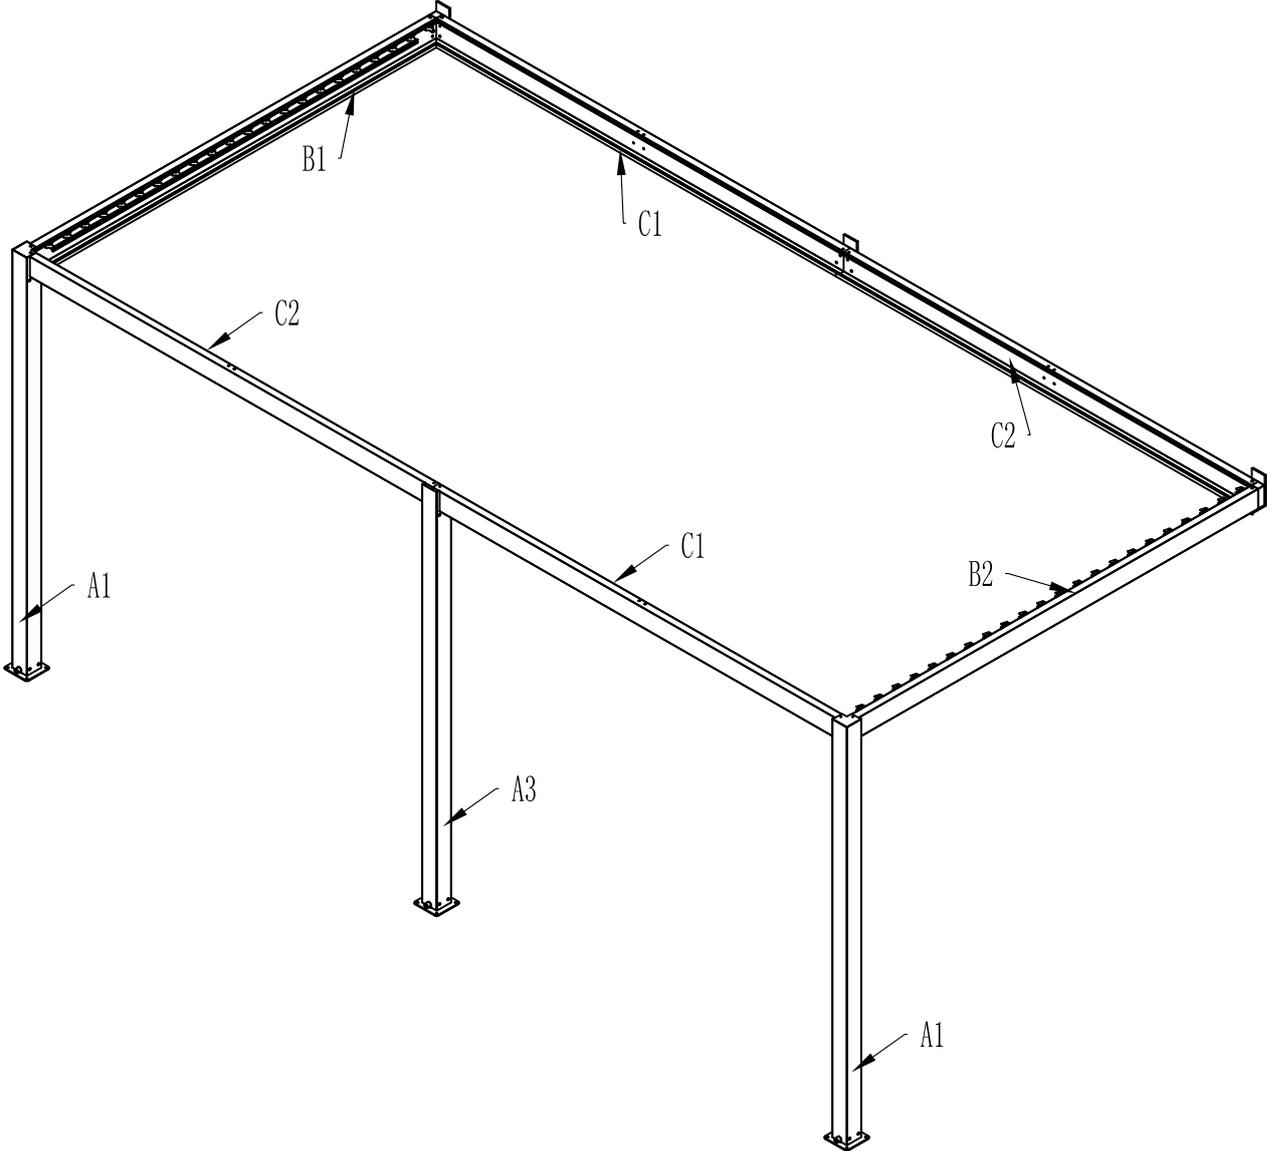

Contact information

Austria



Belgium



Croatia



Denmark



Estonia



Finland



France



Germany



Ireland



Italy



Latvia



Lithuania



Nederland



Norway



Poland



Portugal



Spain



Sweden



Switzerland



UK

