

DANCOVER[®]




Manual
for
Mini Greenhouse
0,93x1x0,38m

Assembly instructions

Size: length: 100cm; width: 93cm; height: 38cm

Detail list:

No.	Name	Quantity pcs
1.	Corners (to the ground) 4x4x50cm	4
2.	Side profiles 88cm	4
3.	Front and hood profiles 95cm	6
4.	Hood carcass curved parts 83cm	3
5.	Polycarbonate connection profile PC-H 96cm	1
6.	Transparent gaskets	25
7.	M5 35 bolts	26
8.	Hinges	2
9.	M5-12 bolts with inserted head	54
10.	M5 nuts	80
11.	Polycarbonate cover for hood 50x96cm	2
12.	Polycarbonate cover for sides 39x90cm	2
13.	Polycarbonate cover for front 31x97cm	2
14.	Polycarbonate sealing tape	6m

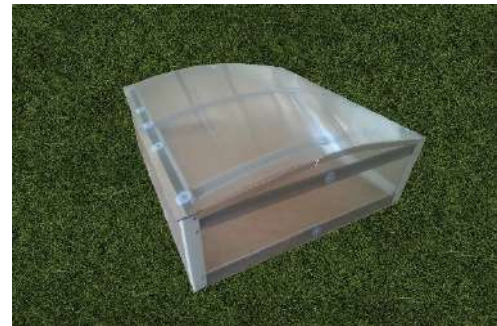

ASSEMBLING:

1. Preparing of polycarbonate.

Sheets are with protection film. The side with the film without notes you need to put inside and the side with notes – outside. **NOTE:** Before assembling remove protection film. At the edges of polycarbonate that is open put the sealing tape (nr.14). On the top hood (nr.11) - at both sides.

2. Front and back parts assembling. On corner (nr.1), bolts M5-12 (nr.9) with screws M5 (nr.10) install front (nr.3) and side (nr.2) profiles thru polycarbonate cover. Profile prominence (omega profile prominence) is oriented at inside of seedbed. **NOTE: Remove all protection tapes from all profiles before assembling. At** side and front parts, Polycarbonate sheets are attached with gaskets (nr.6), bolts M5-35 (nr.7) and screws M5 (nr.10).

3. Assembling of the hood. On hood crossbar profile (nr.3) curved parts are attached with bolts M5-12 (nr.9) and screws M5 (nr.10). Attach hinges (nr.8) on hood with bolts M5-12 (nr.9) and screws M5 (nr.10).

4. Hood connection with box.

Attach hinges with bolts M5-12 (nr.9) and screws M5 (nr.10).

5. Polycarbonate attaching on hood.

Polycarbonate cover for hood (nr.11) are connected with PC-H profile (nr.5). The cover is left protruding in all directions and is attached on hood with bolts M5-35 (nr.7) gaskets (nr.6) and screws M5 (nr.10).

Seedbed is ready to stick it into the ground.

If you have more questions contact your supplier.

DANCOVER[®]

.com

Contact information

Head office:

Dancover A/S
Nordre Strandvej 119 G
3150 Hellebæk
Denmark

For more information
please visit:
www.dancovershop.com

National contact

Denmark: 70 26 76 20
denmark@dancover.com

UK: 020 8099 7570
uk@dancover.com

Germany: 041 0266 7040
germany@dancover.com

France: 0975 181 800
france@dancover.com

Sweden: 040 233 262
sverige@dancover.com

Finland: 0 931 581 720
suomi@dancover.com

Poland: 22 300 8602
polska@dancover.com

Luxembourg: +49 041 0266 7040
luxembourg@dancover.com

Portugal: 308 800 899
portugal@dancover.com

Spain: 911 436 828
espana@dancover.com

Italy: 02 479 21 198
italia@dancover.com

Switzerland: 0840 000125
schweiz@dancover.com

Austria: 0662 626935
austria@dancover.com

Norway: 231 00 690
norge@dancover.com

Nederland: 0 858 880 524
nederland@dancover.com

Ireland: 0 151 33 003
ireland@dancover.com

Belgium: 0 28 08 08 09
belgique@dancover.com